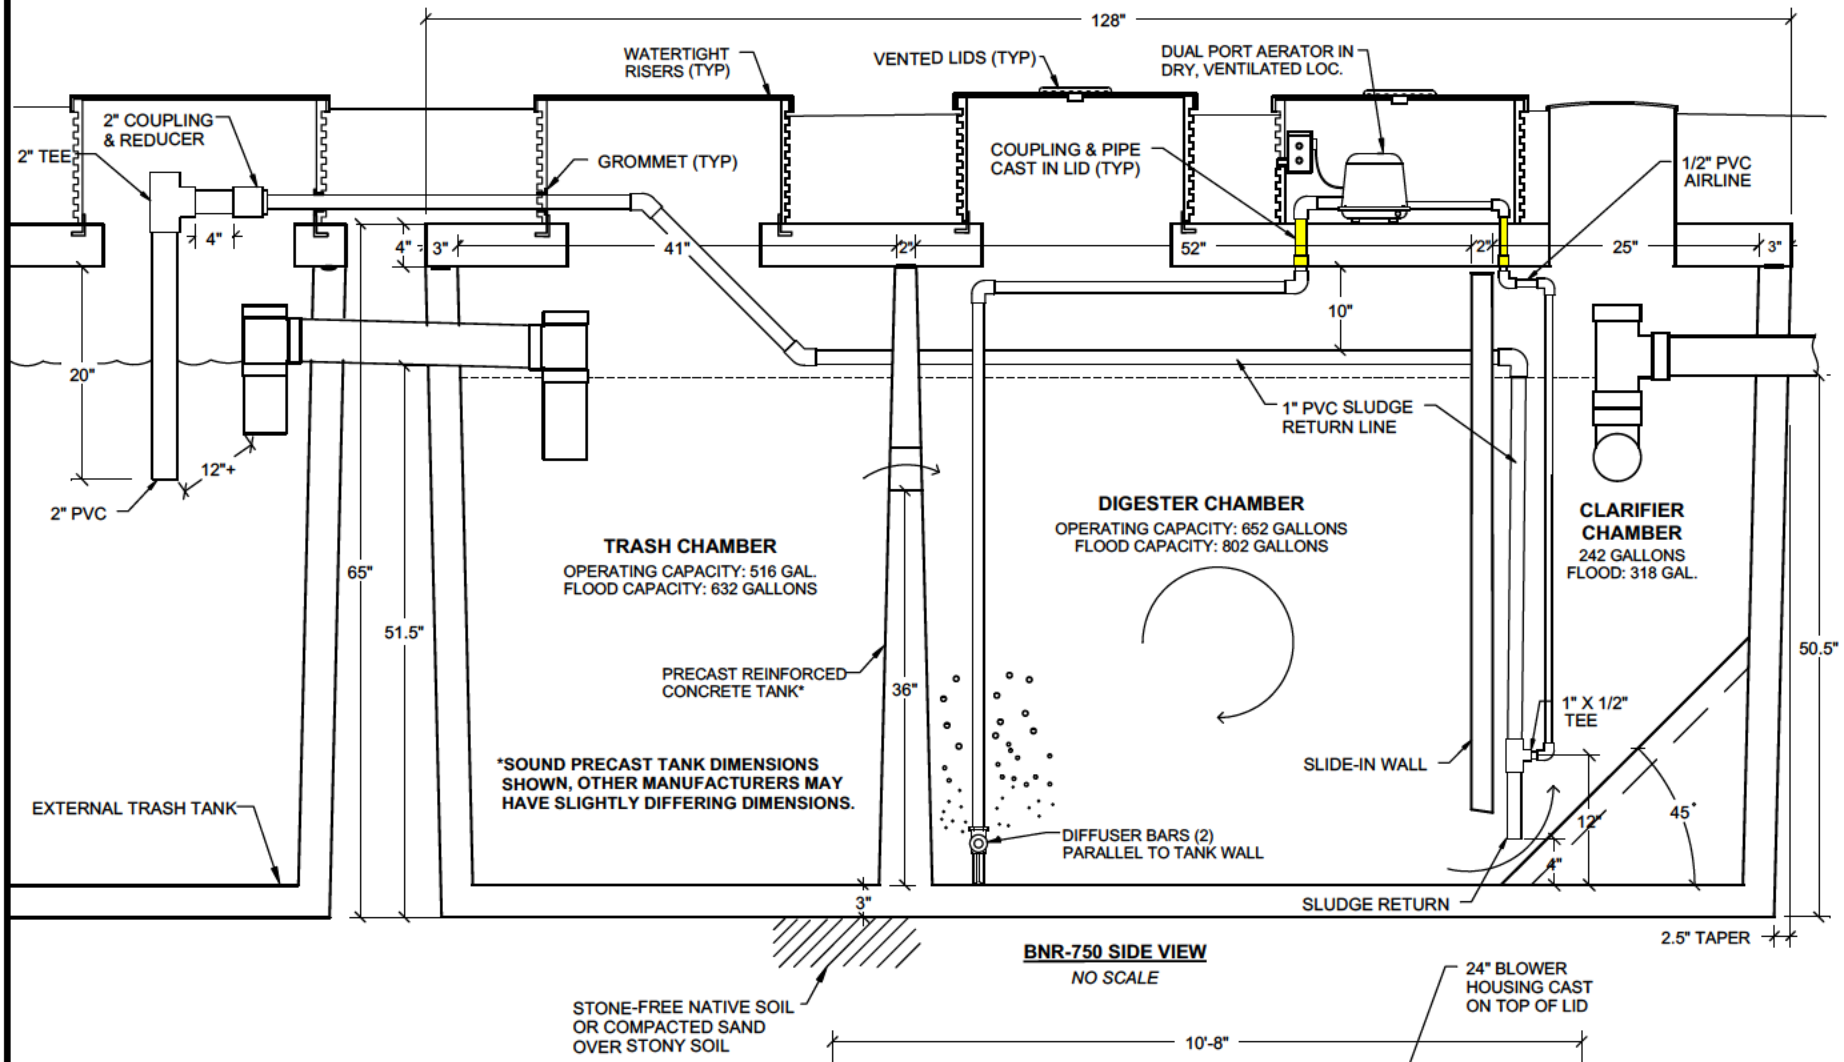

BNR-750 SIDE VIEW

NO SCALE

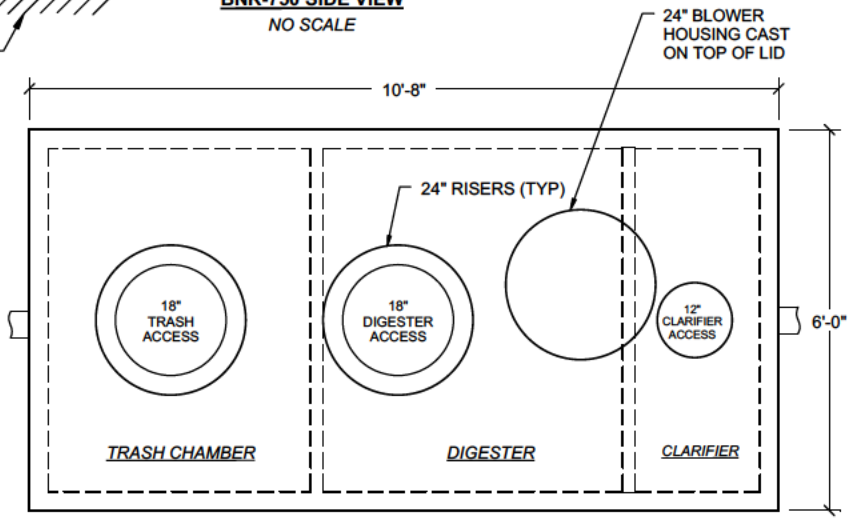

BNR-750 TOP VIEW

INSTALLATION INSTRUCTIONS

1) Excavate tank hole with vertical walls to 1 foot larger than tank on all sides.
2) If bottom of hole is stony, install 3" of compact sand & level out with screed.
3) Install tank in center of hole, keeping 1 ft. void space on all sides.
4) As tank is filling with water, fill in void space with compact granular (sandy) soil free of large clumps of clay.
5) Install rest of system, & affix risers to adapters with waterproof adhesive.
6) Perform watertightness test in field as required by local jurisdiction.
7) Upon approval to backfill, carefully backfill with native soils over top of tank.
8) Final grade the surface to avoid chanelling surface water toward tank.

REVISED:
12/8/25

ENVIRO-FLO, INC.
Wastewater Treatment Technologies
P.O. BOX 321161, Flowood, MS 39232
(877) 836-8476 (601) 845-4716 fax
www.enviro-flo.net

NuWATER BNR-750 DETAIL WITH EXTERNAL TRASH TANK NITROGEN REDUCTION VERSION